

ENERGIZER CHDC

Battery Charger



Dimensions (mm)
83.00 x 76.00 x 30.00

Features:

1. Compact travel size.
2. "AA"/"AAA" Charging.
3. Automatically detects "AA" or "AAA" batteries.
4. Flip Down Plug
5. LED charge indicators: The LED lights during charging and turns off when charging is complete.
6. Reverse polarity protection.
Automatic Timer Shut-Off: Turns off the charger to prevent overcharging. **NOTE:** If the unit is unplugged or power is interrupted during the charging cycle, the timer will start over and run the full charge cycle.

Product Detail:

Designation: Compact Battery Charger

Color: Gray

Charge Capability: Two or Four "AA"/"AAA" NiMH Batteries
Two "AA" and Two "AAA" NiMH Batteries

Charging Current: "AA" 360 mAx2
"AAA" 1200 mAx2

Typical Weight: 100 grams (3.5 oz.)

Dimensions (mm): 83.00 x 76.00 x 30.00

Charging Time: The charger is designed to charge "AA" NiMH 2500 mAh batteries and "AAA" NiMH 850 mAh batteries in 8.5 hours. For lower rated capacity batteries, simply remove the batteries before the charge cycle completes based on the following charge times. Higher capacity batteries will require additional time.

Battery (NiMH)	Capacity (mAh)	Estimated (time)
AA	1300	4.3 hr
AA	1700	5.7 hr
AA	1850	6.2 hr
AA	2100	7.0 hr
AA	2500	8.5 hr
AAA	700	7.0 hr
AAA	800	8.0 hr
AAA	850	8.5 hr

Charging Instructions:

1. To charge batteries, slide out the battery compartment and set the battery holder to the appropriate setting ("AA" or "AAA"). Install the batteries in the chamber as indicated by the polarity symbols (+ and -). When charging only two batteries, use either the two left or two right chambers.
placed in the left two chambers only.
2. Lift the prongs of the AC plug until the plug snaps into place. Plug the charger into a standard AC outlet.
3. The LED will turn off when the batteries are charged. Unplug the charger and remove the batteries.
NOTE: For best performance, charge the batteries between 59°F and 77°F (15°C and 25°C). If the area is to warm, the batteries will not be fully charged. If the area is to cold, the batteries will lose their ability to charge.
NOTE: Orientate charger in a vertical or floor mount position.
NOTE: It is normal for batteries to become warm while charging.
NOTE: Batteries self-discharge at the rate of 1/2 to 1% per day when not in use. Charge before each use. Batteries stored for several months may require 2 or 3 charge cycles to reach full capacity.

Important Safety Instructions:

1. To reduce the risk of injury, charge only rechargeable NiMH batteries with the charger. Other types of batteries might burst, causing personal injury or damage to your charger.
2. Do not charge batteries with different capacities at the same time.
3. For indoor use only. Do not expose charger to rain, snow, or excessive moisture.
4. Never use an extension cord or any attachment not recommended by Energizer®. May result in a risk of fire or electric shock.
5. Do not operate the charger if it has been subjected to shock or damage.
6. Do not disassemble the charger. Incorrect reassembly may result in shock or fire.
7. Always unplug the charger before attempting maintenance or cleaning.
8. Never alter the plug provided. Improper connection can result in shock or fire.
9. This charger is not intended for use by young children or infirm persons without supervision.
10. Never use as a power source.

Important Notice

This data sheet contains information specific to battery chargers manufactured at the time of its publication.
©Energizer Holdings, Inc. - Contents herein do not constitute a warranty