Accessories (Optional)

Single-end Connector Cable (2 cables per set, for emitter and receiver)

For wiring with safety circuit such as single safety relay, safety relay unit, and safety controller

Appearance	Cable length	Specifications	Model
	3 m	M12 connector (8-pin)	F39-JC3A
	7 m		F39-JC7A
	10 m		F39-JC10A
	15 m		F39-JC15A
	20 m		F39-JC20A

Double-end Connector Cable (2 cables per set, for emitter and receiver)

For connection with F3SP-B1P control unit, and for extension when series-connected *

Appearance	Cable length	Specifications	Model
	0.5 m	M12 connector (8-pin)	F39-JCR5B
	1 m		F39-JC1B
	3 m		F39-JC3B
	5 m		F39-JC5B
	7 m		F39-JC7B
	10 m		F39-JC10B
	15 m		F39-JC15B
	20 m		F39-JC20B

 $^{^*}$ To extend the cable length under series connection, use F39-JJR3W and F39-JC \square B in combination.

Power Cable (Included with the main unit) (2 cables per set, for emitter and receiver)

Appearance	Cable length	Model
	0.3 m	F39-JJR3K

Series Connection Cable (2 cables per set, for emitter and receiver)

Туре	Appearance	Cable length	Model	Application
Series connection cable		0.3 m	F39-JJR3W	For series connection *1 When using the Water-resistant Case. *2
Extension cable		0.5 to 15 m	F39-JC□B	To change series connection length in combination with F39-JJR3W
Side-by-side Series connection cable		0.06 m	F39-JJR06L	Dedicated series connection cable with minimum length, used in place of the sensor's cable with connector
		0.15 m	F39-JJR15L	

^{*1.} Total cable length of series connection is 0.6 m to connect to connector cable of the main sensor unit. For series connection with minimum length, use the F39-JJR06L or F39-JJR15L.



^{*2.} When using the F39-EJ \understand \und