
# CMM 100 / 200 male

## **CRIMP**

### Part numbering:




Туре	Gauge	
S	24-28	
С	22	


nn = number of LF contacts


#### **Calculation:**


CMM 100	CMM 200		
<b>A</b> = (nn x 2) - 2	<b>A</b> = nn - 2		
<b>C</b> = A + 5,4	<b>C</b> = A + 5,4		

Refer to dimension table on cover page

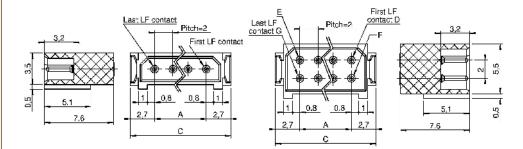











#### 

# **RETENTION LATCHES FOR CMM 100 / 200 MALE**

Straight latch with locking "L"

Straight latch without locking "FL"



Latch for CMM connector with T termination style "LS"

Latch for CMM connector with R termination style "LS"

(upon request)








The strain relief straps are supplied with all male CMM 100 / 200 connectors mounted with latches L or FL type except for Y &YL terminations

PCB Thickness	P/N	Termination style				
< 2,5 mm	13218	٧	Υ	T/TL	R	
> 2,5 mm	13816	VL	YL	T/TL	R	



If no strain relief straps with your connector, please order under P/Ns on the left

