

# N2862A Passive Oscilloscope Probe

Data Sheet





### **Characteristics**

Operating temperature	0° C to 50° C, 80% RH
Storage temperature	0° C to 50° C, 80% RH
Cable length	1.2 m
Bandwidth	DC to 150 MHz
Risetime	2.33 ns
Attenuation ratio	10:1
Input resistance	10 M $\Omega$ (when terminated into 1 M $\Omega)$
Input capacitance	≈12 pF
Maximum input	300 V RMS
Compensation	5-30 pF
Safety	Conformance to IEC-1010



## **Compensation Adjustments**

The probes can be adjusted for low-frequency compensation and high-frequency compensation. For the best measurements you should compensate your probe to match its characteristics to the oscilloscope. A poorly compensated probe can introduce measurement errors. Low-frequency compensation should be performed before performing high-frequency compensation.

### Low-frequency compensation

- 1. Connect the probe from the appropriate oscilloscope channel to 1 kHz square wave source.
- 2. Press Autoscale. Adjust the oscilloscope to display two to three cycles of the waveform over two to six vertical divisions.
- 3. Set the low-frequency compensation adjustment on the probe for the flattest pulse possible (see Figure 2).

### **High-frequency compensation**

- 1. Using the BNC adapter, connect the probe to a square wave generator operating between 10 kHz and 1 MHz, and terminated into 50  $\Omega$ .
- 2. Press Autoscale. Adjust the oscilloscope to display one cycle of the waveform over two to six vertical divisions.
- 3. Set the high-frequency compensation adjustment on the probe for the flattest, most square, and most horizontal pulse possible (see Figure 4).



Figure 1. Low-frequency compensation adjustment.

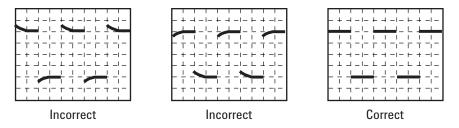


Figure 2.

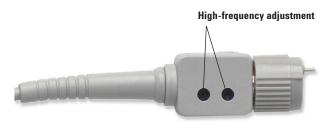


Figure 3. High-frequency compensation adjustment.



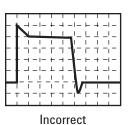


Figure 4.

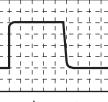

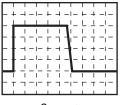

Incorrect

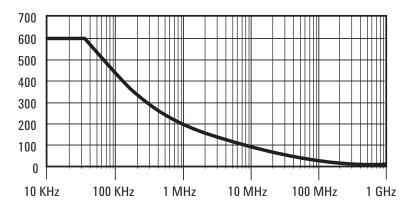


Figure 5. Voltage derating curve



### Accessory Kit

ltem	Description	Quantity
1	Retractable hook	1
2	Adjustment tool	1
3	Insulating cap	1
4	IC insulating cap	1
5	Identification tags (green,yellow, purple and pink)	2 ea
6	Probe tip	1
7	Ground spring	1
8	BNC adapter	1
9	Ground lead (black 12 cm)	1



### **Agilent Email Updates**

www.agilent.com/find/emailupdates

Get the latest information on the products and applications you select.



### www.agilent.com/find/quick

Quickly choose and use your test equipment solutions with confidence.





### www.agilent.com/find/open

Agilent Open simplifies the process of connecting and programming test systems to help engineers design, validate and manufacture electronic products. Agilent offers open connectivity for a broad range of system-ready instruments, open industry software, PC-standard I/O and global support, which are combined to more easily integrate test system development.

Microsoft<sup>®</sup> and Windows<sup>®</sup> are U.S. registered trademarks of Microsoft Corporation.

Pentium<sup>®</sup> is a U.S. registered trademark of Intel Corporation.

### **Remove all doubt**

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilent-trained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to

www.agilent.com/find/removealldoubt

### www.agilent.com

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

### www.agilent.com/find/contactus

#### Phone or Fax

**United States:** (tel) 800 829 4444 (fax) 800 829 4433

Canada: (tel) 877 894 4414 (fax) 800 746 4866

### China:

(tel) 800 810 0189 (fax) 800 820 2816

**Europe:** (tel) 31 20 547 2111

### Japan:

(tel) (81) 426 56 7832 (fax) (81) 426 56 7840

### Korea:

(tel) (080) 769 0800 (fax) (080) 769 0900

Latin America: (tel) (305) 269 7500

### Taiwan:

(tel) 0800 047 866 (fax) 0800 286 331

#### **Other Asia Pacific Countries:**

(tel) (65) 6375 8100 (fax) (65) 6755 0042 Email: tm\_ap@agilent.com Revised: February 5, 2007

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2007 Printed in USA February 20, 2007 5989-2228EN



**Agilent Technologies** 

