


EMV 1200

Single Hole Mounting 2-Wire Meter

EMV 1200 is an easy to mount LCD digital panel meter. The module features a 4 to 25V measurement range with 100mV resolution and is powered from the signal it is measuring. Only valid readings are displayed; the module indicates "LO" at voltages below 4V and "HI" at voltages above 25V. To install the meter, the user need only drill a single 5.5mm / 7/32" hole in the panel. The module is fitted to the panel by locating its threaded stud through the hole, fitting the washer and tightening the nut provided. The module's connecting wires pass through the hollow stud into the target application for connection. A rubber seal is included, providing splashproof protection for the unit when fitted to the meter during installation.

- 🔌 Single Hole Mounting
- 🔌 2-Wire Operation
- 🔌 4 to 25V d.c. Full Scale Reading
- 🔌 12.5mm / 0.5" LCD Digit Height
- 🔌 Reverse Polarity Protection
- 🔌 Splashproof

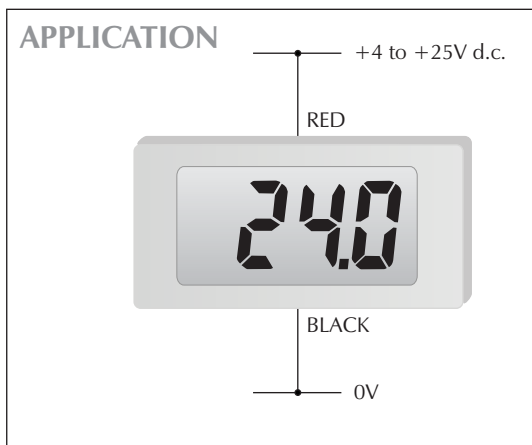

Easy Mounting Voltmeter				Stock Number
				EMV 1200
Specification	Min.	Typ.	Max.	Unit
Accuracy (overall error)		0.2		V (±1 count)
Linearity			±1	count
Valid displayed reading*	4.0		25.0	V d.c.
Resolution		100		mV d.c.
Sample rate		3		sample/sec
Operating temperature range	0		50	°C
Supply voltage	3		50	V d.c.
Supply current			3	mA

* At voltages below 4.0V d.c., the LCD will display *LO* and will ultimately go blank.
 At Voltages in excess of 25.0V d.c., the LCD will display *HI*.
 Do NOT exceed 50V d.c., as this may damage the meter.
 The module includes reverse polarity protection up to 30V for up to 30 seconds.
 Operation and accuracy at voltages above 25.0V or below 4.0V are not specified.

SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's wires must not exceed 60Vd.c. The user must ensure that the incorporation of the meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).

DIMENSIONS All dimensions in mm (inches)

Reading when $V_{in} < 4V$, before display switches off.

Reading when $V_{in} > 25V$.

FITTING THE EMV 1200

Drill a 5.5mm / 7/32" hole in the panel. Fit seal to the rear of the module. Fit the module to the panel by passing its screw threaded stud and the wires through the hole, fitting the washer and tightening the nut provided. Take care not to trap either of the connecting wires. Do not to overtighten the nut as this may damage the meter.

Specifications liable to change without prior warning

EMV 1200

Issue 8

IRCN 695

M.C.

Applies to EMV 1200/2