


**PRODUCTS** Series HS,TS & PS HS, TS & PS Rotary Switches



- Download Specifications
- Configure This Switch!

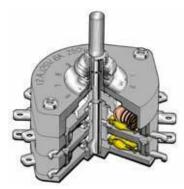

Standard Size Rotary Switches
The HS, PS, TS Rotary Series standard size switches are available in low, medium, and high capacity models made of zinc plated steel mounting plate making them sturdy and dependable for high performance. Flat and knurled shafts are available as well as D flat shafts in two sizes.



## Standard Size Rotaries Series HS TS PS

#### **GENERAL SPECIFICATIONS**

**Electrical Capacity** 

**Resistive Load:** HS13: 6A @ 125V AC, 3A @ 250V AC, or 5A @ 30V DC

HS16: 12A @ 125V AC or 6A @ 250V AC

TS: 6A @ 125/250V AC PS: 30A @ 125/250V AC

**Other Ratings** 

Contact Resistance: 10 milliohms maximum

Insulation Resistance: 200 megohms minimum @ 500V DC

Dielectric Strength: 1,500V AC minimum for 1 minute minimum

Mechanical Life: HS: 15,000 operations minimum

TS: 30,000 operations minimum PS: 10,000 operations minimum

**Electrical Life:** HS: 7,500 operations minimum

TS: 10,000 operations minimum PS: 5,000 operations minimum

**Indexing:** 30° for HS16, TS & PS; 45° for HS13

Contact Timing: Nonshorting HS13; Shorting & Nonshorting HS16; Nonshorting TS; Nonshorting PS

Range of Operating Torque: HS16: 0.54 ~ 0.64Nm for first pole & 0.05Nm for each additional pole

HS13: 0.15 ~ 0.24Nm

TS: 0.09Nm for first pole & (0.07Nm x total number of poles) + 0.13Nm for additional poles

PS: 0.14Nm for each pole

Materials & Finishes

**Knob:** Phenolic resin

**Shaft:** HS13: brass; HS16, TS, & PS: brass with nickel plating **Bushing:** HS13: brass; HS16, TS, & PS: brass with nickel plating

Case: Phenolic resin

Movable Contacts: HS13, HS16, & TS phosphor bronze; PS silver alloy

Stationary Contacts: HS13, HS16, & PS: brass with silver plating; TS: phosphor bronze

Terminals: HS: phosphor bronze; TS & PS: copper with silver plating

**Environmental Data** 

Operating Temp Range: -10°C through +70°C (+14°F through +158°F)

Humidity: 90 ~ 98% humidity for 96 hours @ 40°C (104°F)

Vibration: 10 ~ 55 Hz with peak-to-peak amplitude of 1.5mm traversing the frequency range

& returning in 1 minute; 3 right angled directions for 2 hours

Shock: 50G (490m/s²) acceleration (tested in 3 right angled directions, with 3 shocks in each direction)

Installation

Mounting Torque: 2.94Nm (26 lb•in)

Maximum Panel Thickness: Shown with panel cutouts in following drawings

Soldering Time & Temperature: Manual Soldering (HS series only): See Profile A in Supplement section.

**Standards & Certifications** 

UL Recognized: HS16 models 1- through 6-pole are recognized at 12A @ 125V AC & 6A @ 250V AC

See Supplement section to find UL rating details. UL File No. WOYR2.E44145

Add "/U" to end of part number to order UL mark on switch.

C-UL Recognized: HS16 models 1- through 6-pole are recognized at 12A @ 125V AC & 6A @ 250V AC

See Supplement section to find C-UL rating details. UL File No. WOYR8.E44145


Add "/C-UL" to end of part number to order UL mark on switch.





6 AMP SINGLE POLE/NONSHORTING/45° INDEXING								
Round	D-flat	Number of	Stopper	Number of	Load	Schematics		
Shaft	Shaft	Positions	Settings	Terminals	Terminals	HS13X & of Keyway	HS13Y & of Keyway	HS13Z & of Keyway
HS13X	HS13X-D	2	Fixed	1 COM, 2 LOAD	1 & 2	20	3 0 0	2 0 4 0 1 0
HS13Y	HS13Y-D	3	Fixed	1 COM, 3 LOAD	1, 2, & 3	10	10	10
HS13Z	HS13Z-D	4	Fixed	1 COM, 4 LOAD	1, 2, 3, & 4	c <sub>1</sub> o	c <sub>1</sub> o	c <sub>1</sub> o

Switch is viewed from shaft end and shown in position 1. Terminal numbers are not on switch. Standard Hardware shown on last page of this section.





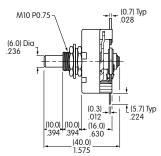





Maximum Effective Panel Thickness With Locking Ring .150" (3.8mm) Without Locking Ring .189" (4.8mm)


(10.3) Dia .406

(1.5) --.059


HS13X

## 12 AMP/SHORTING & NONSHORTING/30° INDEXING


Knurled Shaft		D-flat Shaft			Number of	Stopper	Number of	
Nonshorting	Shorting	Nonshorting	Shorting	Pole	Positions	Settings	Terminals	Schematic
HS16-1	HS16-1S	HS16-1N	HS16-1SN	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	Cl l
HS16-2	HS16-2S	HS16-2N	HS16-2SN	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	11 <sub>0</sub> 0 <sup>2</sup>
HS16-3	HS16-3S	HS16-3N	HS16-3SN	3P	2-11	2, 3, 4 11	3 COM, 33 LOAD	100 03
HS16-4	HS16-4S	HS16-4N	HS16-4SN	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	Qof Keyway O4
HS16-5	HS16-5S	HS16-5N	HS16-5SN	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	05
HS16-6	HS16-6S	HS16-6N	HS16-6SN	6P	2-11	2, 3, 4 11	6 COM, 66 LOAD	0 0

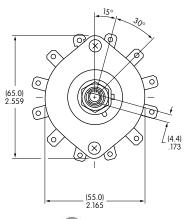




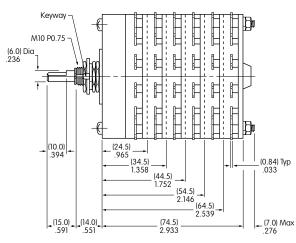

- On each deck of multipole devices common and load terminals are in the same positions as shown in the schematic above.
- Switch is viewed from the shaft end and shown in position 1.
- Terminal numbers are on the switch bottom. Stopper positions are molded on the top of the switch.
- Standard Hardware shown on last page of this section.

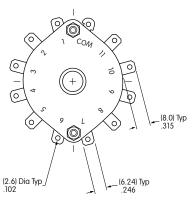




Maximum Effective Panel Thickness With Locking Ring .189" (4.8mm) Without Locking Ring .228" (5.8mm)



## 6 AMP/NONSHORTING/ADJUSTABLE STOP/30° INDEXING

Model	Pole	Number of Positions	Stopper Settings	Number of Terminals	Shaft Type
TS1N	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	D Flat
TS2N	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	D Flat
TS3N	3P	2-11	2, 3, 4 11	3 COM, 33 LOAD	D Flat
TS4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	D Flat
TS5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	D Flat

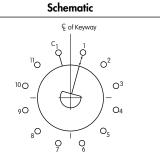


On each deck of multipole devices common & load terminals are in the same positions as shown in this schematic.

Switch is viewed from the shaft end and shown in position 1.


Terminal numbers are on the switch bottom. Stopper positions are molded on the top of the switch.

#### **Panel Cutouts**




Maximum Effective Panel Thickness With Locking Ring .189" (4.8mm) Without Locking Ring .228" (5.8mm)



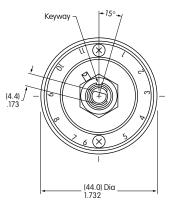


#### **Bottom**

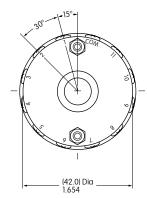



TS5N

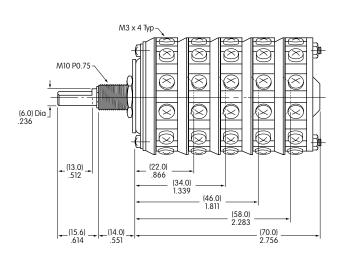

<sup>•</sup> Standard Hardware shown on last page of this section.




30 AMP/NONSHORTING/ADJUSTABLE STOP/30° INDEXING							
Knurled Shaft	D Flat Shaft	Pole	Number of Positions	Stopper Settings	Number of Terminals	Schematic	
PS1	PS1N	1P	2-11	2, 3, 4 11	1 COM, 11 LOAD	© of Keyway	
PS2	PS2N	2P	2-11	2, 3, 4 11	2 COM, 22 LOAD	10 0 02	
PS3	PS3N	3P	2-11	2, 3, 4 11	3 COM, 33 LOAD	100	
PS4	PS4N	4P	2-11	2, 3, 4 11	4 COM, 44 LOAD	90 04	
PS5	PS5N	5P	2-11	2, 3, 4 11	5 COM, 55 LOAD	80 V O <sub>5</sub>	

On each deck of multipole devices common & load terminals are in the same positions as shown in this schematic. Switch is viewed from the shaft end and shown in position 1. Terminal numbers are on switch bottom. Stopper positions are molded on the top of the switch.


• Standard Hardware shown on last page of this section.



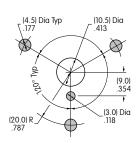


Maximum Effective Panel Thickness Without Locking Ring .189" (4.8mm)

# Тор

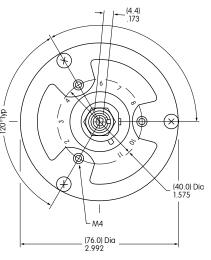

#### **Bottom**

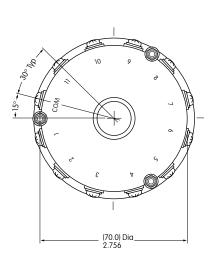

- M4 x 5 Typ




M10 P0.75 (6.0) Dia .236 (10.0) .394 (7.0) .276 → (15.0) → .591

PS4N

#### **SHAFT TYPES**


#### **D Flat Shaft**

For use with AT431 and AT432




#### **Knurled Shaft**


Not for use with AT431 or AT432




### **OPTIONAL KNOBS FOR D FLAT SHAFTS**


## AT431 Large Knob Phenolic Resin Black only

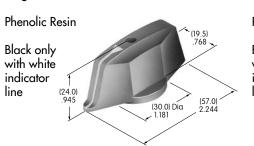

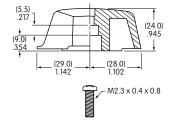


#### AT432 **Small Knob**

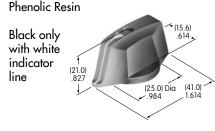

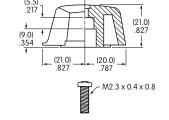

#### **Knob Orientation**

The rotary knobs used on the D-flat shafts can be oriented on the switch to suit the customer's particular front panel needs simply by sliding the knob over the square adaptor at the preferred orientation.

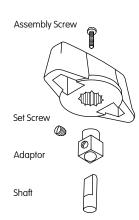

### STOPPER SETTING

#### For HS16, TS, & PS Models

The HS16, TS, and PS switches are supplied with the stopper plate set for the maximum number of positions allowed for that model. Prior to installation, the desired stopper setting should be made:

- Be sure the shaft is turned counterclockwise to the extreme left. If the shaft is not turned counterclockwise to the extreme left, proper setting cannot be achieved.
- 2. Loosen the nut far enough to allow raising the stopper plate for resetting.
- 3. Insert the stopper in the numbered hole for the desired stopper setting. Satisfactory switch functioning cannot be assured if the stopper plate is not properly positioned.
- Tighten the nut firmly against the stopped plate.

#### Standard Hardware Supplied with HS, TS, and PS:

AT526 Hex Mounting Nut (quantity 3)

AT518 Locking Ring (quantity 1)

AT520 Split Lockwasher (quantity 1)

Use of mounting supports on PS is optional; screws are not provided.

