

Distinctive Characteristics

Low profile body of MRF model accommodates space limitations required for PCB mounting. For the MRA and MRK bushing mount models, the range of behind panel body depths is .323" to .669" (8.2mm to 17.0mm).

Positive detent mechanism for distinct feel and audible feedback.

Metal bushing and housing construction increases durability.


Adjustable stopper plate allows 2-12 position settings.

High contact reliability achieved by the self-cleaning contact mechanism.

Break-before-make contact timing with sliding contacts in MRA and rotary contactor disk in MRF and MRK models.

Interior housing seal and molded-in PC terminals, plus shaft rubber o-ring on MRF and MRK and polyamide cover on MRF model, allow cleaning after automated soldering.

Exterior rubber washer and double flatted bushing on MRA and MRK give protection in splashproof applications.

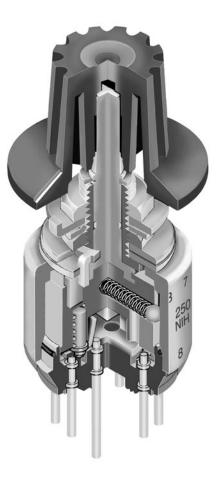







General Specifications

Electrical Capacity (Resistive Load)

For MRA: 250mA @ 125V AC 0.4VA maximum @ 28V AC/DC maximum For MRF or MRK: (Applicable Range 0.1mA ~ 0.1A @ 20mV ~ 28V) Note: Find additional explanation of operating range in Supplement section.

Other Ratings


Contact Resistance:	10 milliohms maximum for MRA; 50 milliohms maximum for MRF & MRK			
Insulation Resistance:	100 megohms minimum @ 500V DC			
Dielectric Strength:	1,000V AC minimum for 1 minute minimum for MRA			
-	500V AC minimum for 1 minute minimum for MRF & MRK			
Mechanical Life:	Mechanical Life: 30,000 operations minimum			
Electrical Life:	10,000 operations minimum			
Range of Operating Torque:	0.02 ~ 0.07Nm for MRA; 0.005 ~ 0.02Nm for MRF & MRK			
Contact Timing:	Nonshorting (break-before-make)			
·	MRA – self-cleaning, sliding contact; MRF & MRK – self-cleaning, rotary contactor disk			
Indexing:	30°			

Materials & Finishes

Shaft: Stopper Plate: Bushing/Housing: Movable Contacts: End Contacts & Terminals: Common Contacts & Terminals: Base:	s with nickel plating I with zinc plating for MRA & MRK; polyamide cover with stopper for MRF alloy with zinc plating per with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK s with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK s with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK yl phthalate for MRA; fiberglass reinforced polyamide for MRF & MRK	
Environmental Data Operating Temperature Range: Humidity: Vibration: Shock:	-10°C through +70°C (+14°F through +158°F) 90 ~ 95% humidity for 96 hours @ 40°C (104°F) 10 ~ 55Hz with peak-to-peak amplitude of 1.5mm traversing the frequency range & returning in 1 minute; 3 right angled directions for 2 hours 50G (490m/s ²) acceleration (tested in 3 right angled directions, with 3 shocks in each direction)	
Installation Mounting Torque: Cap Installation Force:	.686Nm (6.08 lb•in) 19.6 ~ 29.4N (4.41 ~ 6.61 lbf) for MRA & MRK	
Processing Soldering Time & Temperature: Cleaning:	Wave Soldering for MRA: See Profile A in Supplement section. Wave Soldering for MRF & MRK: See Profile B in Supplement section. Manual Soldering for MRA: See Profile A in Supplement section. Manual Soldering for MRF & MRK: See Profile B in Supplement section. Automated cleaning recommended. Stopper plate, as well as washers for MRA & MRK, must be in place to maintain automated cleaning. See Cleaning specifications in Supplement section.	
Standards & Certifications	MPA MAPE & MPK models have not been tested for LIL recognition or CSA contification	

UL Recognition or CSA Certification: MRA, MRF, & MRK models have not been tested for UL recognition or CSA certification. These switches are designed for use in a low-voltage, low-current, logic-level circuit. When used as intended in a logic-level circuit, the results do not produce hazardous energy.



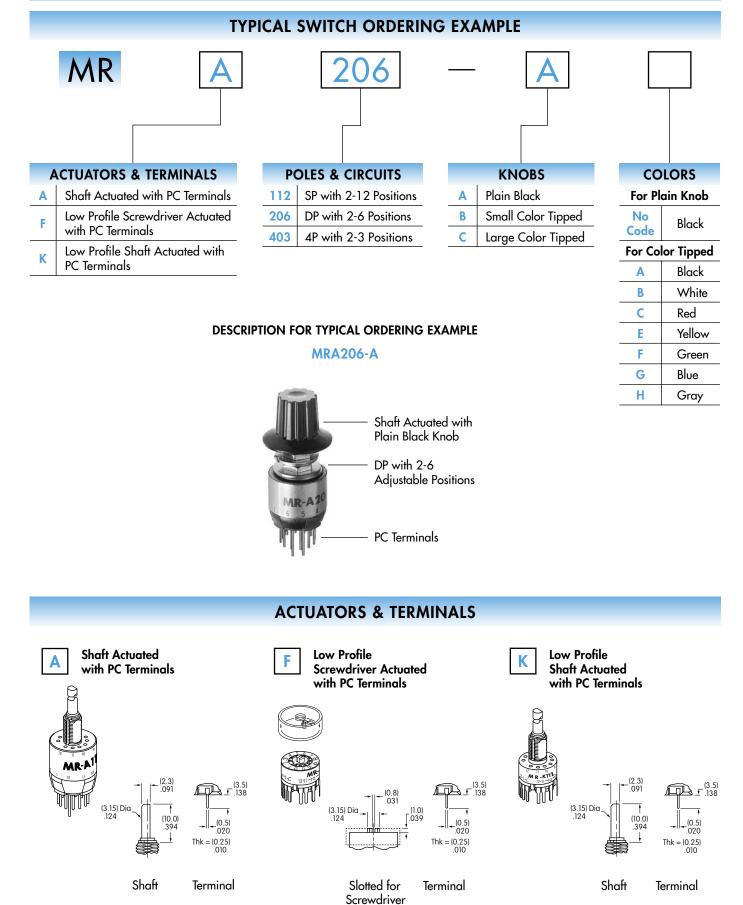



Half-Inch Diameter Process Sealed Rotaries Series MR


	POLES & CIRCUITS							
Pole	Model	Number of Positions	Stopper Settings	Number of Terminals	Schematics			
SP	MRA112 MRF112	2-12 2-12	2, 3, 4, 12 2, 3, 4, 12	1 COM, 12 LOAD 1 COM, 12 LOAD	A			
01	MRK112	2-12	2, 3, 4, 12	1 COM, 12 LOAD	1 2 3 4 5 6 7 8 9 10 11 12			
DP	MRA206	2–6	2, 3, 4, 5, 6	2 COM, 12 LOAD	A B			
	MRF206	2–6	2, 3, 4, 5, 6	2 COM, 12 LOAD				
	MRK206	2–6	2, 3, 4, 5, 6	2 COM, 12 LOAD	1 2 3 4 5 6 1 2 3 4 5 6			
4P	MRA403	2–3	2, 3	4 COM, 12 LOAD	А В С D			
	MRF403	2–3	2, 3	4 COM, 12 LOAD				
	MRK403	2–3	2, 3	4 COM, 12 LOAD				

POSITION SETTING FOR MRA, MRF, & MRK MODELS

Each switch is supplied with the stopper set for the maximum number of positions allowed for that model. Prior to installation, the desired position setting should be made. Contact factory for continuous rotation.


MRF Models

- 1. Remove the protective cover from the switch body.
- 2. Turn the shaft counterclockwise to the extreme left by using a screwdriver.
- Inside the cover is a magnifying lens which would be positioned over the number which is to be the maximum position used; when the cover is then snapped into the switch, the projection beside the lens fits into the correct hole for setting the stop.

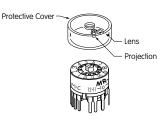

MRK & MRA Models


- Using the actuator knob, turn the shaft counterclockwise to the extreme left. If the shaft is not turned counterclockwise to the extreme left, proper setting cannot be achieved. At this extreme position, the white line on the knob points to the number 1 position shown on the side of the switch.
- Remove the knob from the shaft and loosen the nut far enough to allow raising the stopper plate, plus washer(s), for resetting to the desired position.
- 3. Note the position numbers on the side of the switch; these correspond to the terminal numbers and stopper holes. Insert the stopper in the hole numbered for the maximum desired number of stop settings. Satisfactory switch functioning cannot be assured if the stopper plate is not properly positioned.
- 4. Tighten the nut (beveled side up) firmly against the stopper plate.

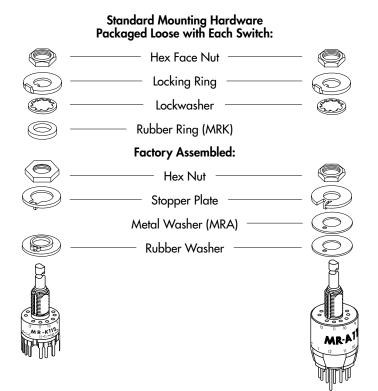



TYPICAL SWITCH DIMENSIONS



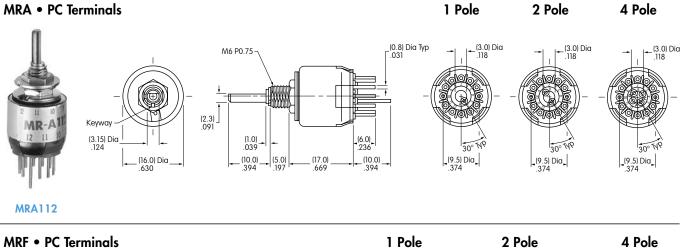




1 Pole




4 Pole

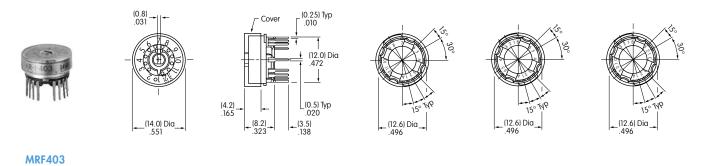

MRK • PC Terminals


1 Pole

2 Pole

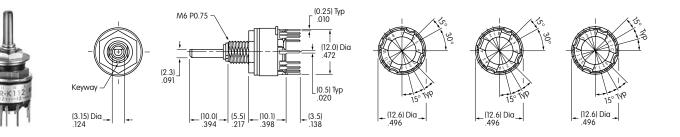


MRK112


MRK devices are designed to be panel mounted. Installation without panel mounting will affect reliability.

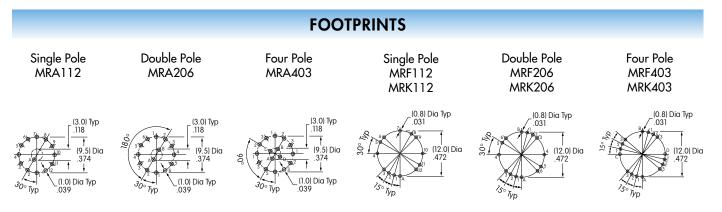




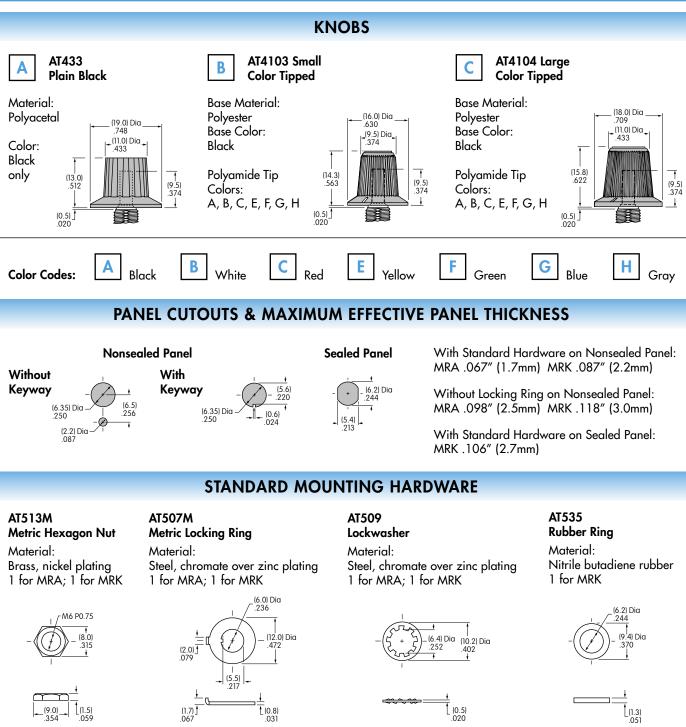

OPTIONAL SUPPORT BRACKET

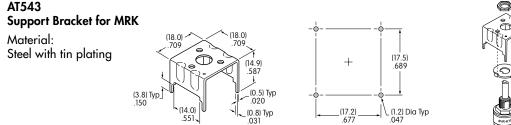



A support bracket is needed when the MRK is mounted only to a PC board and does not have the bushing through a panel.