

Back-UPS RS

APC BACK-UPS RS 500VA 120V



APC Back-UPS RS, 300 Watts / 500 VA, Input 120V / Output 120V, Interface Port USB

Includes: CD with software, Cord management straps, USB cable, User Manual

Standard Lead Time: Usually in Stock

BR500 Features

Battery failure notification	Provides early-warning fault analysis on batteries enabling timely preventive maintenance
Battery-protected and surge-only outlets	Reserves power capacity and run time for connected equipment that require battery back-up while providing surge only protection for less critical equipment
Cold-start capable	Provides temporary battery power when the utility power is out.
Hot-swappable batteries	Ensures clean, uninterrupted power to protected equipment while batteries are being replaced
Disconnected battery notification	Warns when a battery is not available to provide backup power.
Dataline Surge Protection	Provides protection of connected equipment from power surges on the data lines.
Automatic self-test	Periodic battery self-test ensures early detection of a battery that needs to be replaced.
Audible Alarms	Provides notification of changing utility power and UPS conditions.
User-replaceable batteries	Increases availability by allowing a trained user to perform upgrades and replacements of the batteries reducing Mean Time to Repair (MTTR)
USB Connectivity	Provides management of the UPS via a USB port (not available on all models).
Transformer-block spaced outlets	Protect equipment with input transformer blocks without blocking access to other receptacles.
Boost and Trim Automatic Voltage Regulation (AVR)	Gives higher application availability by correcting low and high voltage conditions without using the battery.
Intelligent Battery Management	Maximizes battery performance, life, and reliability through intelligent, precision charging.
Safety-agency approved	Ensures the product has been tested and approved to work safely with the connected service provider equipment and within the specified environment. UL, FCC, CE, C-Tick approvals.
Lifetime data recovery warranty	Provides peace of mind by providing professional data recovery services in the event data is lost due to the failure of the unit.
Battery replacement without tools	Allows quick, easy battery replacement.
LED status indicators	Quickly understand unit and power status with visual indicators.

Back-UPS RS Features & Benefits

Protection	
Battery-protected and surge-only outlets	Reserves power capacity and run time for connected equipment that require battery back-up while providing surge only protection for less critical equipment
Boost and Trim Automatic Voltage Regulation (AVR)	Gives higher application availability by correcting low and high voltage conditions without using the battery.
Data line surge protection	Provides protection of connected equipment from power surges on the data lines.
Safety-agency approved	Ensures the product has been tested and approved to work safely with the connected service provider equipment and within the specified environment.

UL, FCC, CE, C-Tick approvals.

Power conditioning

Protects connected loads from surges, spikes, lightning, and other power disturbances.

Convenience

Audible Alarms

Provides notification of changing utility power and UPS conditions.

Automatic restart of loads after UPS shutdown

Automatically starts up the connected equipment upon the return of utility power.

Automatic self-test

Periodic battery self-test ensures early detection of a battery that needs to be replaced.

Battery replacement without tools

Allows quick, easy battery replacement.

LED status indicators

Quickly understand unit and power status with visual indicators.

Cold-start capable

Provides temporary battery power when the utility power is out.

Hot-swappable batteries

Ensures clean, uninterrupted power to protected equipment while batteries are being replaced

Resettable circuit breakers

Enables a quick recovery from overload events.

Transformer-block spaced outlets

Protect equipment with input transformer blocks without blocking access to other receptacles.

User-replaceable batteries

Increases availability by allowing a trained user to perform upgrades and replacements of the batteries reducing Mean Time to Repair (MTTR)

Manageability

Adjustable voltage sensitivity

Provides the ability to adapt the UPS for optimal performance in specific power environments or generator applications.

Adjustable voltage-transfer points

Maximizes useful battery life by widening the input voltage window or tightening the output voltage regulation.

Serial Connectivity

Provides management of the UPS via a serial port.

USB Connectivity

Provides management of the UPS via a USB port (not available on all models).

Multiple mounting methods

Allows for standardization on one product for use in different environments.

Intelligent Battery Management

Micro-processor controlled battery charging and diagnostic testing ensures maximum battery life.

Output

Output Power Capacity	300 Watts / 500 VA
Max Configurable Power	300 Watts / 500 VA
Nominal Output Voltage	120V
Output Frequency (sync to mains)	47 - 63 Hz
Crest Factor	3 : 1
Waveform Type	Stepped approximation to a sinewave
Output Connections	(3) NEMA 5-15R (Battery Backup)
	(3) NEMA 5-15R (Surge Protection)



Input

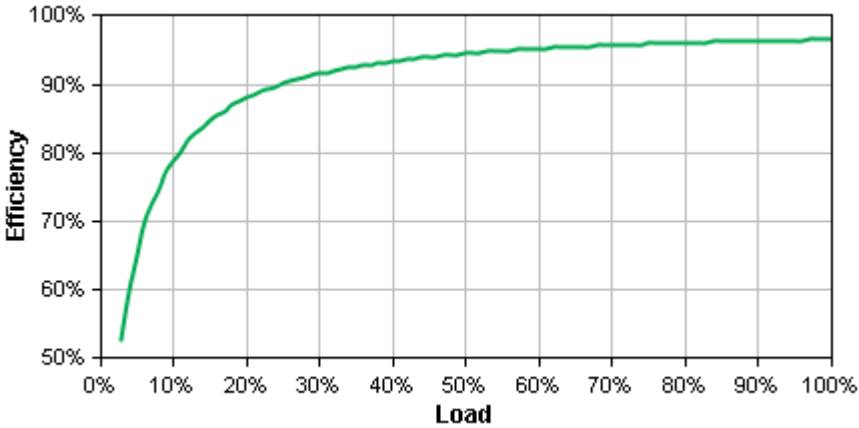
Nominal Input Voltage	120V
Input Frequency	47 - 63 Hz
Input Connections	NEMA 5-15P
Cord Length	1.83 meters
Input voltage range for main operations	98 - 132V
Input voltage adjustable range for mains operation	78 - 152V
Maximum Input Current	10A
Input Breaker Capacity	10A



Batteries & Runtime

Battery Type	Maintenance-free sealed Lead-Acid battery with suspended electrolyte : leakproof
Typical recharge time	8 hour(s)
Replacement Battery	RBC2 , RBC2J
RBC™ Quantity	1
Typical Backup Time at Half Load	14.8 minutes (150 Watts)
Typical Backup Time at Full Load	2.8 minutes (300 Watts)
Runtime Chart	Back-UPS RS

Energy Use/Efficiency



Curve fit to measured efficiency data. All measurements taken in normal operating mode, at typical environmental conditions, with nominal electrical input and resistive load output.

[View Enlarged Chart](#)

Communications & Management

Interface Port(s)	USB
Control panel	LED status display with On Line : On Battery : Replace Battery and Overload indicators
Audible Alarm	Alarm when on battery : distinctive low battery alarm : overload continuous tone alarm

Surge Protection and Filtering

Surge energy rating	1020 Joules
Filtering	Full time multi-pole noise filtering : 5% IEEE surge let-through : zero clamping response time : meets UL 1449
Data Line Protection	RJ-45 Modem/Fax/DSL/10-100 Base-T protection

Physical

Maximum Height	165.00 mm
Maximum Width	91.00 mm
Maximum Depth	284.00 mm
Net Weight	6.00 KG
Shipping Weight	7.21 KG
Shipping Height	245.00 mm
Shipping Width	176.00 mm
Shipping Depth	337.00 mm

Master Carton Units	2.00
Master Carton Weight	33.29 lbs.
Color	Beige
SCC Codes	1073130422843 8
Units per Pallet	80.00

Environmental

Operating Environment	0 - 40 °C
Operating Relative Humidity	5%
Operating Elevation	0-3000 meters
Storage Temperature	-5 - 45 °C
Storage Relative Humidity	5%
Storage Elevation	0-15000 meters
Audible noise at 1 meter from surface of unit	45.00 dBA
Online Thermal Dissipation	63.00 BTU/hr

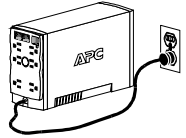
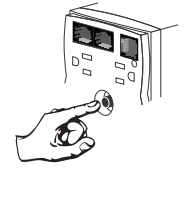

Conformance

Regulatory Approvals	cUL Listed,FCC Part 15 Class B,FCC Part 68,NOM,UL 1778,UL 497A,UL 498
Standard Warranty	3 years repair or replace

**The time to recharge to 90% of full battery capacity following a discharge to shutdown using a load rated for 1/2 the full load rating of the UPS.

Troubleshooting


Use the tables below to solve minor Back-UPS installation and operation problems. Consult APC On-line Technical Support or call APC Technical Support for assistance with problems that cannot be resolved using this document:

Possible Cause	Procedure	
Back-UPS will not switch on		
Back-UPS not connected to an AC power source.	Check that the Back-UPS power plug is securely connected to the wall outlet.	
Back-UPS circuit breaker "tripped".	Disconnect non-essential equipment from the Back-UPS. Reset the circuit breaker (located on the rear panel of the Back-UPS) by pushing the circuit breaker button fully inward until it catches. If the circuit breaker resets, switch the Back-UPS on and reconnect the equipment one-at-a-time. If the circuit breaker trips again, it is likely that one of the connected devices is causing the overload.	
Very low or no utility voltage.	Check the wall outlet that supplies power to the Back-UPS using a table lamp. If the lamp bulb is very dim, have the utility voltage checked by a qualified electrician.	

Back-UPS does not power computer/monitor/external drive during an outage

Internal battery is not connected.	Check the battery connections. (See "Connect the Battery" under "Installation" on the front page of this document.)
Computer, monitor or external disk/CD-ROM drive is plugged into a Surge Only outlet.	Move computer, monitor, or external drive power cord plug to the Battery Backup outlets.

Back-UPS operates on battery although normal utility voltage exists

Back-UPS circuit breaker "tripped".	Disconnect non-essential equipment from the Back-UPS. Reset the circuit breaker (located on the rear panel of the Back-UPS) by pushing the circuit breaker button fully inward until it catches.	
The wall outlet that the Back-UPS is connected to does not supply utility power to the unit.	Connect the Back-UPS to another wall outlet or have a qualified electrician check the building wiring.	

Back-UPS does not provide expected backup time

Back-UPS is excessively loaded.	Unplug non-essential Battery Backup connected equipment, such as printers and plug them into Surge Only outlets. Note: Devices that have motors or dimmer switches (laser printers, heaters, fans, lamps, and vacuum cleaners, for example) should not be connected to the Battery Backup outlets.
Back-UPS battery is weak due to recent outage and has not had time to recharge.	Charge the battery. The battery charges whenever the Back-UPS is connected to a wall outlet. Typically, eight hours of charging time are needed to fully charge the battery from total discharge. Back-UPS run-time is reduced until the battery is fully charged.
Battery requires replacement.	Replace battery (see Order Replacement Battery). Batteries typically last 3-6 years, shorter if subjected to frequent power outages or elevated temperatures.

A red indicator is lit

Battery is not connected properly.	Check the battery connections. Consult "Connect the Battery" under "Installation" on the front page of this document. It shows how to access the battery and connect the wires.
The Overload indicator is lit if equipment connected to the Battery Backup outlets is drawing more power than the Back-UPS can provide.	Move one or more equipment power plugs to the Surge Only outlets.
Battery requires replacement.	The battery should be replaced within two weeks (see "Order Replacement Battery"). Failure to replace the battery will result in reduced run-time during a power outage.

Red indicators are flashing

Back-UPS failure.	Call APC for service.
-------------------	-----------------------

Replace Battery indicator lit and an alarm sounds when the Back-UPS is turned on

Internal battery not connected.	Check the battery connections. Consult "Connect the Battery" under "Installation" on the front page of this document. It shows how to access the battery and connect the wires.
---------------------------------	---

Specifications

Input Voltage (on line)	78 - 150 Vac
Frequency Limits (on line)	47 - 63 Hz (autosensing)
On Battery Waveshape	Stepped Sine Wave
Maximum Load	500 VA - 300 W
Typical Recharge Time	8 Hours
Operating Temperature	32° to 104°F (0° to 40°C)
Storage Temperature	23° to 113°F (-5° to 45°C)
Operating and Storage Relative Humidity	0 to 95% non-condensing
Size (H x W x D)	6.5 x 3.6 x 11.2 inches (16.5 x 9.2 x 28.5 cm)
Weight	500 VA - 13.8 lb (6.3 kg)
Shipping Weight	500 VA - 15.3 lb (7.0 kg)
EMI Classification	FCC/DOC Class B Certified
On Battery Run-Time	20 Minutes typical - desktop computer and 15 inch (38.1 cm) monitor.
FCC Notice	FCC Part 68, FCC Part 15 Class B Notice: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

Back-UPS Storage

Before storing, charge the Back-UPS for at least eight hours. Store the Back-UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

Storage Temperature	Recharge Frequency	Charging Duration
23° to 86°F (-5° to 30°C)	Every 6 months	8 hours
86° to 113°F (30° to 45°C)	Every 3 months	8 hours

Please contact APC Technical Support to troubleshoot the unit before returning it to APC.

Order Replacement Battery

The typical battery lifetime is 3-6 years (depending on the number of discharge cycles and operating temperature). A replacement battery can be ordered over the phone from APC, or the battery can be ordered on-line from the APC web site (see below, a valid credit card is required).

When ordering, please specify Battery Cartridge **RBC2**.

Battery Replacement

Battery replacement is a safe procedure. The Back-UPS can be left on with the equipment connected during this procedure. Do not replace the battery when the Back-UPS is On Battery. Refer to the APC Safety Guide for additional information.

Please consult the "Connect Battery" diagrams (a through d) on the front page of this document when performing the following procedures:

- While viewing the Back-UPS from the front, lay the Back-UPS on its left side (diagram a).
- Slide the battery compartment cover off of the Back-UPS (diagram a).
- Grasp the tab attached to the battery and slide the battery partially out of the case. Grab the battery firmly and pull it straight out. The battery wires will disconnect as the battery is pulled out (diagram b).
- Carefully unpack the new battery. Retain the packing carton so that the old battery can be recycled.
- Insert the new battery halfway into the Back-UPS (diagram d).
- Connect the wires to the new battery as follows:
 - Red Wire - to red (positive) terminal
 - Black Wire - to black (negative) terminal
- Note: Small sparks at the battery terminals are normal during connection.
- Carefully insert the battery fully into the Back-UPS.
- Slide the battery compartment cover back into place.
- The Replace Battery indicator will shut off within the 14-day self-test interval, or when the Back-UPS is switched On.

The old battery must be recycled. Deliver the battery to an appropriate recycling facility or return it to APC in the packing carton that came with the new battery. Additional recycling information is provided with the new battery.

Service

If the Back-UPS arrived damaged, notify the carrier.

If the Back-UPS requires service, do not return it to the dealer. The following steps should be taken:

- Consult the Troubleshooting section to eliminate common problems.
- Verify that the circuit breaker is not tripped. A tripped circuit breaker is the most common Back-UPS problem.
- If the problem persists, consult APC On-line Technical Support or call APC Technical Support (see below).
 - When calling APC Technical Support, have the Back-UPS model number, serial number and date of purchase available. Be prepared to troubleshoot the problem over the phone with an APC Technical Support representative. If this is not successful, APC will issue a Return Merchandise Authorization (RMA) number and a shipping address.
 - A Back-UPS under warranty will be repaired at no cost. The standard warranty is two (2) years from the date of purchase. APC's standard procedure will be to replace the original unit with a factory reconditioned unit. APC will ship the replacement unit once the defective unit has been received by the repair department, or cross ship upon the receipt of a valid credit card number. The customer pays for shipping the unit to APC. APC pays ground freight transportation costs to ship the replacement to the customer.
 - Customers who must have the original unit back due to assigned asset tags and set depreciation schedules must declare such a need at first contact with an APC Technical Support representative.
 - If the warranty has expired, there is a repair charge.

For return:

- Disconnect the red battery terminal wire from the Back-UPS battery (see "Connect the Battery" instructions and graphics on the front of this document). Department of Transportation (DOT) regulations require that the battery wire be disconnected before shipping the Back-UPS to APC.
- Pack the Back-UPS in its original packaging. If the original container is not available, contact APC Technical Support to obtain a new set. Pack the Back-UPS properly to avoid damage in transit.
- Never use styrofoam beads for packaging. Damage sustained in transit is not covered under the warranty (insuring the package for full value is recommended).
- Write the RMA number on the outside of the package.
- Return the Back-UPS to APC by insured, prepaid carrier to the address provided by APC Technical Support.

Warranty

The standard warranty is two (2) years from the date of purchase. APC's standard procedure is to replace the original unit with a factory reconditioned unit. Customers who must have the original unit back due to assigned asset tags and set depreciation schedules must declare such a need at first contact with an APC Technical Support representative. APC will ship the replacement unit once the defective unit has been received by the repair department, or cross ship upon the receipt of a valid credit card number. The customer pays for shipping the unit to APC. APC pays ground freight transportation costs to ship the replacement to the customer.